




Tri-Mitre Fitting Instructions

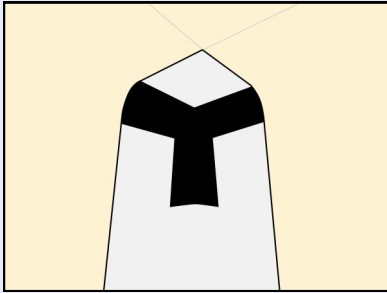


Fix the Tri-Mitre to the corner using a contact adhesive.

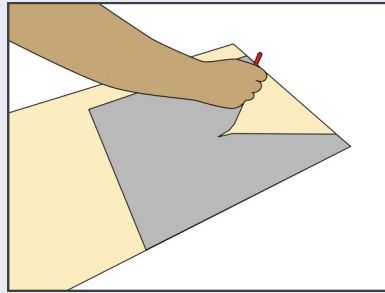


Place the stencil on the face of the required length of vinyl. Mark around the stencil and the 200mm "Setting Point" on the right of the stencil.

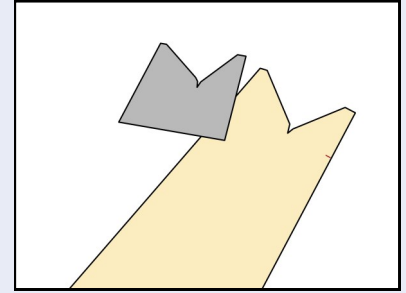


Score through the marks on the face of the vinyl. Turn vinyl over and prepare with an adhesive. When tacky tear off excess vinyl to leave your "pre-cut mitre".

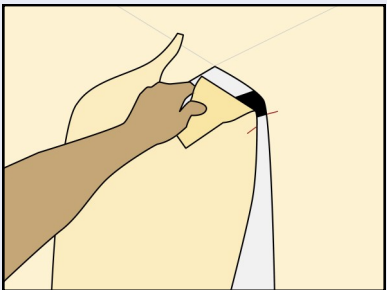


Warm the required length of vinyl to make it pliable. Place the required length of vinyl, ensuring the 200mm "Setting Point" mark, matches up with the base of the horizontal cove former on the right hand side. Continue inserting the required length of vinyl down the vertical right hand side joint.

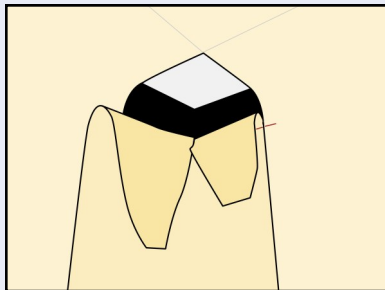

Warm the required length of vinyl and manipulate around the vertical cove former.

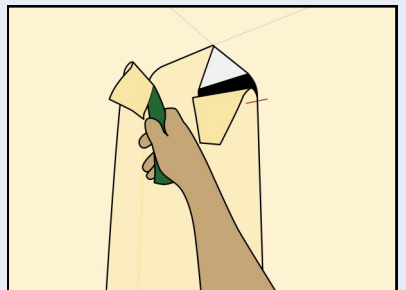

Fit the left hand side of the "pre-cut" mitre and continue to cut in down the required length of vinyl.

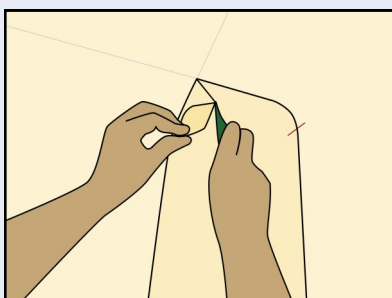

Fit the right hand side of the "pre-cut" mitre cutting in the overlapped internal joint.

Technical Data

The product is hazard free, contains no water or solvents. For the full Technical Datasheet go to the Cutting Corners website www.cuttingcorners.org.uk

Cleaning

Wipe with damp cloth and mild detergent solution. Do not use solvents